



261st District Court E-Courtroom Quick Reference Guide

- * This courtroom contains two touch panel monitors at each of the council tables and the lectern. One monitor is used as a control switch (left monitor) and one is used as a display (right monitor).
- * Each council table and lectern have available ports (VGA, audio, and power) to connect a notebook computer, NOTE: Set your resolution to 1024 x 768.
- * The black Extron boxes are extremely sensitive, please do not attempt to move them yourselves; contact court IT staff for help.
- * This courtroom contains two flat panel LCD's, one facing the jury box and one facing the gallery.
- * There are some differences in how you make your video choice selection and choose where the video feed displays.



261st District Court E-Courtroom Quick Reference Guide

- * To choose your video source selection press the appropriate source button along the left side of the control monitor (council 1, council 2, lectern laptop, lectern PC, document camera, DVD/VCR player).
- * To choose the destination for the video source you've selected, press the appropriate button along the bottom of the control monitor, (to judge and council, to all displays, blank all displays).

